


Installation Information for RV Series Aircraft Nose Wheel

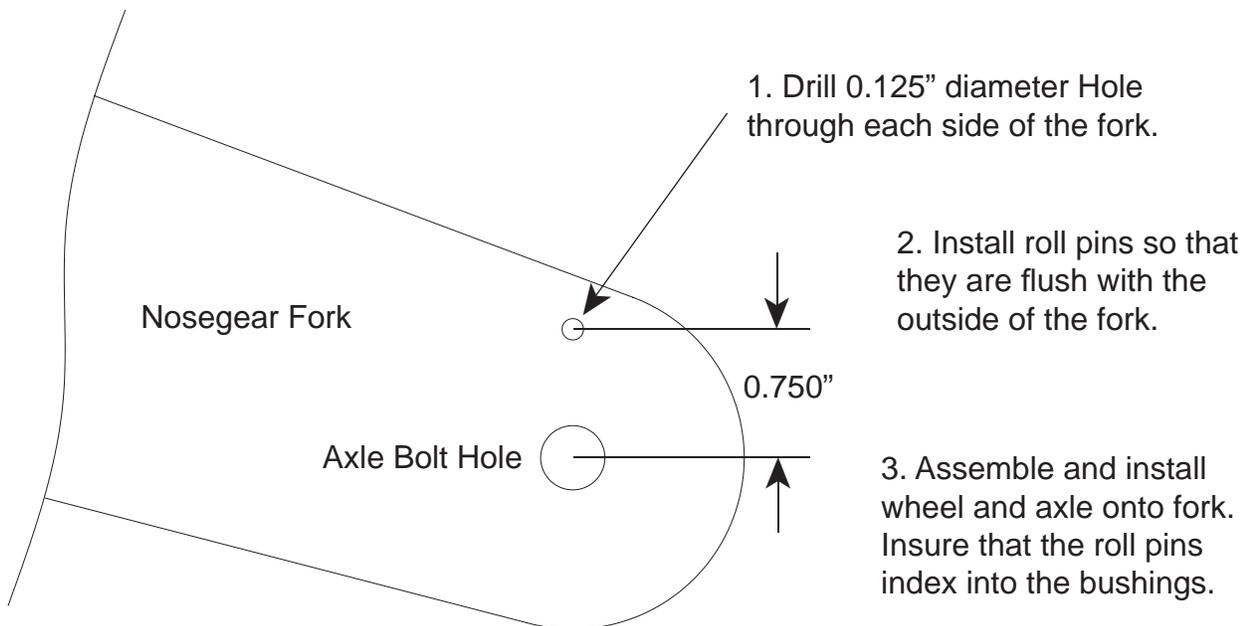

4. Tighten axle bolt and observe wheel drag. If wheel has side play or spins freely with no wheel bearing drag, disassemble and trim inner sleeve just enough to eliminate all side play and achieve a slight wheel bearing pre-load drag when the axle bolt is tightened.

